

Technical Newsletter

#tnl2016-0022e # 1 / 1



Change of the Touch Panel



Notice

We have changed the touch panels of our machines and shipped the machines in order since July 2014.

If a touch panel before the change gets broken, we replace it by a one after the change.
In such a case, the dedicated driver software supporting the OS of the machine needs to be installed to operate the touch panel.

Also, it may be necessary to replace some parts at the same time depending on the model.

Before the change / after the change

	Touch panel before the change	Touch panel after the change
Part No.	DHEUT315B01-* DHEUT315G01-* DHEUT3JAG02-* BAUT3JAG4H1	DHER15RD101-0
Appearance (rear side)	 ↑ Top	 ↑ Top

Applicable models and parts to be replaced at the same time

Series	Applicable models	Parts to be replaced at the same time
3000 series	DAD3350	None
6000 series	DFD6341 / DFD6362 / DFD6560 / DFD6750 / DFD6860	None
	DFD6240 / DFD6340 / DFD6361	If the touch panel before the change is "DHEUT3JAG02-*" or "BAUT3JAG4H1": the connection cable
7000 series	DFL7020 / DFL7160 / DFL7340 / DFL7341 / DFL7360FH	None
	DAL7020	Exterior covers around the touch panel
	DFL7161 / DFL7360 / DFL7361 / DFL7560L	The model is equipped with 2 touch panels. If either one of the touch panels before the change gets broken, the both need to be replaced.
Other	DDS2300	None

Inquiries

Please contact your local DISCO sales representative or customer engineer if you have any questions regarding this matter.